 


材质:300克双铜过哑胶 双面印刷

MCHOSE



1. [B] indicates wireless mode
2. [OFF] indicates USB wired mode
3. [2.4G] indicates 2.4G mode

MCHOSE



Win system

MCHOSE



Switch
backlight color



MCHOSE

MCHOSE



Status indicator
light brightness -



MCHOSE

MCHOSE

MCHOSE



MCHOSE



Diagram of a square face with a smaller square inside, labeled F_n .



MCHOSE

MCHOSE




MCHOSE

MCHOSE



The diagram shows the rear panel of the device with the following components:

- Power Switch:** A rectangular switch labeled "OFF 2.4G".
- Power Button:** A circular button labeled "POWER".
- Power Connector:** A rectangular connector labeled "POWER".



MCHOSE